

Safety instructions

Active hi-fi components

Intended use

This appliance is intended exclusively for use in dry (living) rooms. Only install and use the device as described in the operating instructions. Any other use (especially safety-related or medical applications and outdoor installation) is considered improper use and may result in damage to property or personal injury.

Safety precautions WARNINGS

All warning signs on the appliance, the accessories and in the operating instructions must be observed.
become.

INSTALLATION SITE

- Ensure a secure footing on a level and stable surface.
- Avoid vibrations.
- Do not place the device in the immediate vicinity of network components (e.g. router, repeater). Electromagnetic interference can cause noise. Cell phones in the immediate vicinity can also cause noise.

HEAT EFFECT

- Only operate the appliance with accessories within a temperature range of 10°C to 40°C.
- The appliance should not be set up near heat sources (radiators, ovens, radiant heaters, naked flames).
- Ensure that the appliance is adequately ventilated.
- Ventilation openings must not be covered or blocked.
- The appliance must not be covered, e.g. by curtains or drapes. Keep a sufficient distance (approx. 20 cm) from walls.
- Do not place any naked flames, such as candles, on the appliance.

INFLUENCE OF HUMIDITY

- The appliance must not be exposed to dripping or splashing water.
- It must also not be used to place vases or other containers filled with liquid.
- Do not expose the appliance to water or high humidity. There is a risk of electric shock.
- In the event of contact with moisture or liquids, disconnect the appliance from the mains immediately.

POWER CABLE

- The mains cable must always be ready for use and should only be laid in such a way that nobody can step on the mains cable. It must also not be trapped by objects that could damage the cable.
- When using plugs and multiple sockets, sure that the cable is not kinked at the point where it comes out of the socket. Do not connect or disconnect the mains cable with wet hands.
- The mains plug serves as a switch-off device and must always be freely accessible.
- Do not jeopardize the safety of plugs with reverse polarity protection or earth connection. A plug with reverse polarity protection has 2 contacts with a wider contact. A plug with an earth connection has 2 contacts and a third contact as an earth connection. The third contact is for your safety. If the supplied cable does not fit into your socket, ask an electrician to replace the unusable cable.
- Please ensure that the connection cables are laid safely. Cables must not be laid in the vicinity of traffic routes (areas where people are present or moving) or cross them.

OVERLOAD

- Sockets, multiple sockets and extension cables must not be overloaded.
- Observe the nominal values on the sockets and extension cables. There is a risk of electric shock and fire if overloaded.

POWER CONNECTION

- Please observe the voltage values on the information signs.
- The appliance may only be operated with the voltage and frequency values specified on the labels.

LIGHTNING PROTECTION/PRECAUTIONARY MEASURES

- If the appliance is not to be used for a longer period of time (e.g. on vacation), it should be disconnected from the mains by pulling out the mains plug.
- The appliance should also be disconnected from the mains during thunderstorms. This prevents damage from lightning strikes and overvoltage.

AVOIDANCE OF HEARING DAMAGE

Prolonged exposure to sound at a high volume can cause hearing damage or even permanent hearing loss. Please read the following safety instructions before using the device.

- To start, set the volume control to the lowest possible volume.
- Slowly increase the volume to a level that is comfortable for you.
- Always try to keep the volume as low as possible.
- If you experience discomfort or notice ringing in your ears, it is recommended that you stop using the device immediately.

GENERAL

- Do not use any aggressive cleaning agents containing alcohol or solvents or abrasive cleaning agents.
- Under unfavorable conditions (e.g. high room temperatures or humidity), the rubber feet supplied or fitted may leave residues or marks on some material surfaces.
- Only use the original accessories supplied or specified by the manufacturer.
- The device or the housing must not be opened. Repair and maintenance work may only be carried out by qualified specialists.
- BATTERIES AND BATTERY CAPACITIES must not be exposed to extreme heat, e.g. sunshine, fire or similar. There is also a risk of explosion if the battery is inserted incorrectly. Replace the battery only with the same or equivalent type.

DANGER OF SWALLOWING BATTERIES

- The device/remote control may contain a coin-shaped button battery that could be swallowed. Keep batteries out of the reach of children at all times. If a battery is swallowed, it can cause severe internal burns and death in as little as 2 hours.
- Keep new and used batteries away from children.
- Be sure that the battery compartment is completely closed again after changing the batteries. If the battery compartment cannot be closed securely, stop using the product and keep it away from children.
- If you think that batteries may have been swallowed or entered the body, consult a doctor immediately.

DAMAGE THAT MUST BE REPAIRED BY A SPECIALIST

In the event of the following damage, the appliance should be disconnected from the mains immediately and a specialist should be commissioned to repair it:

- If the mains cable is visibly damaged, the appliance must no longer be operated. A damaged cable must not be repaired but must be replaced.
- Damage to the mains socket on the device.
- If moisture or water has got into the appliance or objects have fallen into the appliance.
- If the device has been dropped and the housing is damaged.
- If the appliance does not work properly even though you have followed all the instructions in the operating instructions.
- Only subsequent modifications that have been expressly approved by the manufacturer may be made.
- Only original spare parts may be used for repairs.
- After a repair, the appliance should be checked for safety to ensure proper and safe operation.
- Repairs must always be left to qualified specialists, as otherwise you expose yourself to dangerous high voltages or other hazards.



The triangle with the lightning symbol warns the user that high voltages are used within the appliance which can cause dangerous electric shocks.



The triangle with the exclamation mark draws the user's attention to the fact that the enclosed operating instructions contain important operating and maintenance (repair) instructions that must be observed.



Do not open! Danger of electric shock!

CAUTION: Do not open the housing/power supply units or remove covers to avoid electric shocks. No repair by the user. Repair by qualified technicians only!

Do not use sockets or extension cables that do not fully accommodate the appliance plug.

WARNING:

Protection class I appliances may only be connected to a mains socket outlet with an earthed protective earth conductor.

Manufacturer information:

Audio Company Germany GmbH

Lise-Meitner-Str. 9

50259 Pulheim

Germany

www.magnat.de

info@premiumaudioco.com

Person responsible for the EU: Premium

Premium Audio Company Germany GmbH

Lise-Meitner-Str. 9

50259 Pulheim

Germany

www.magnat.de

compliance@premiumaudioco.com